## ZIPPER™ WHEEL MOUNTING INSTRUCTIONS

## **Zipper Cast Zipper Zipper Max**

Before working on your planter or drill

**DANGER:** When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments. **PLEASE:** Read instructions completely and verify all package contents before beginning installation.

**NOTE:** When running one spiked wheel and one standard closing wheel, **stagger** the wheels; it does not matter which wheel runs first.

Remove the original closing wheels, and use the existing 5/8" x 3.5" bolt and nut to mount the Zipper wheels to your tail section. The **gold spiked wheels are rights**; the **silver spiked wheels are lefts**. The tips of the spikes must be pointing out, away from the tail section. **The fingers are pointed down and out in the back** (so that they will be pointed down when they exit and release the soil).


When mounting Zipper wheels, measure the space between the cast rings directly under the lowest point of the rim. **There needs to be 2"- 2.5" distance between wheels** at this point. The wheels should be closer together when planting shallower, and further apart when planting deeper.

 
You may need to insert washers or spacers (sold separately) on the inside of each wheel in order to achieve this distance. You will not need spacers if you are running the Zippers with the G2 liquid fertilizer disc. The spacers are already built into the G2.

NOTE: You may need to install spacers to achieve proper distance between the wheels.


Planting 1" deep requires less space between wheels than planting 3" deep.

Wheels should be a **minimum 2"** apart at the noted point and a **maximum 2.5"** apart.

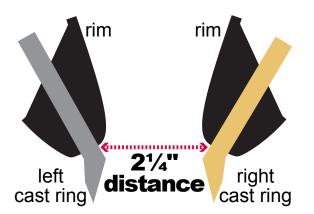



Item	Quantity
Zipper Wheel (standard or cast)	1
Instruction Sheet	1

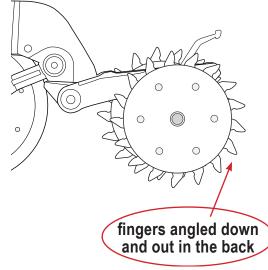



**SEE ALSO:** MOHAWK/ZIPPER TROUBLESHOOTING Setting the Wheel Distance