

Canola Wiper Kit—Pro Series eSet (4 Rows)

- Kit Part #** 720305
- Parts List**
- 6-32 Pan Head Screws (Qty. 8)
 - Seed Extractors (Qty. 4)
 - Wiper (Qty. 4)
 - Seed Blocker Tube (Qty. 4)

Use this kit with Precision Planting's Pro Series eSet kit (720136) and Canola Disk (720283) for planting canola.


- Step 1**
Insert the wiper into the pocket of the long brush frame as shown at right and below.
- Step 2**
Use the holes in the wiper to drill two 1/8" holes through the liner and meter housing.
- Step 3**
Use two supplied 6-32 pan head screws to attach the wiper to the liner and housing.



Questions? Check the website: www.precisionplanting.com or call us at 309-925-5050.



Step 4
Insert the disk into the meter and ensure that the wiper is aligned to the disk as shown at right. If the wiper is not oriented correctly, remove the disk and bend the wiper slightly so that it sits on the disk as shown.

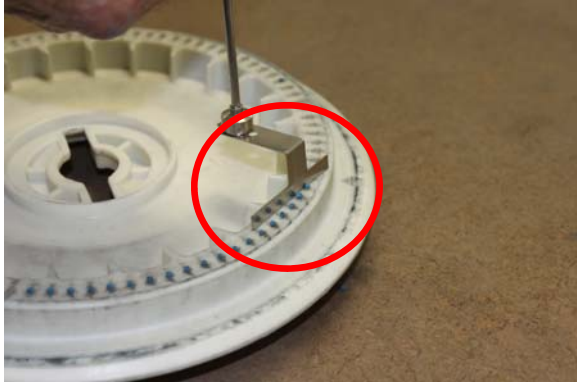

Step 5
Run the meter on a MeterMax Ultra test stand. If the test reveals a leak between the disk and housing, use a piece of thin weather stripping on the inside lower radius of the housing. When installing, overlap the edge of the housing by 1/32" so that the disk can rub and fill the void.



Note on Singulators
A specialty singulators is recommended for use with this product. If you choose to use the existing singulator, it should be tested with a check gage to ensure that the correct portion of the holes in the disk are covered.

